



# CHDBT-1H4CPLV

4K UHD+ 1 by 4+1 HDBaseT/HDMI Splitter



Operation Manual



## **DISCLAIMERS**

The information in this manual has been carefully checked and is believed to be accurate. Cypress Technology assumes no responsibility for any infringements of patents or other rights of third parties which may result from its use.

Cypress Technology assumes no responsibility for any inaccuracies that may be contained in this document. Cypress also makes no commitment to update or to keep current the information contained in this document.

Cypress Technology reserves the right to make improvements to this document and/or product at any time and without notice.

## **COPYRIGHT NOTICE**

No part of this document may be reproduced, transmitted, transcribed, stored in a retrieval system, or any of its part translated into any language or computer file, in any form or by any means—electronic, mechanical, magnetic, optical, chemical, manual, or otherwise—without express written permission and consent from Cypress Technology.

© Copyright 2018 by Cypress Technology.

All Rights Reserved.

## **TRADEMARK ACKNOWLEDGMENTS**

All products or service names mentioned in this document are trademarks of the companies with which they are associated.





## SAFETY PRECAUTIONS

Please read all instructions before attempting to unpack, install or operate this equipment and before connecting the power supply. Please keep the following in mind as you unpack and install this equipment:

- Always follow basic safety precautions to reduce the risk of fire, electrical shock and injury to persons.
- To prevent fire or shock hazard, do not expose the unit to rain, moisture or install this product near water.
- Never spill liquid of any kind on or into this product.
- Never push an object of any kind into this product through any openings or empty slots in the unit, as you may damage parts inside the unit.
- Do not attach the power supply cabling to building surfaces.
- Use only the supplied power supply unit (PSU). Do not use the PSU if it is damaged.
- Do not allow anything to rest on the power cabling or allow any weight to be placed upon it or any person walk on it.
- To protect the unit from overheating, do not block any vents or openings in the unit housing that provide ventilation and allow for sufficient space for air to circulate around the unit.
- Please completely disconnect the power when the unit is not in use to avoid wasting electricity.

## VERSION HISTORY

REV.	DATE	SUMMARY OF CHANGE
RDV1	2019/06/12	Preliminary release



# CONTENTS

<b>1. Introduction</b> .....	<b>1</b>
<b>2. Applications</b> .....	<b>1</b>
<b>3. Package Contents</b> .....	<b>1</b>
<b>4. System Requirements</b> .....	<b>2</b>
<b>5. Features</b> .....	<b>2</b>
<b>6. Operation Controls and Functions</b> .....	<b>4</b>
6.1 Front Panel .....	4
6.2 Rear Panel.....	5
6.3 IR Cable Pinouts .....	6
6.4 RS-232 Pinout and Defaults .....	6
6.5 OSD Menu .....	7
6.6 RS-232 Commands.....	17
<b>7. Connection Diagram</b> .....	<b>30</b>
<b>8. Specifications</b> .....	<b>31</b>
8.1 Technical Specifications .....	31
8.2 Video Specifications .....	32
8.3 Audio Specifications .....	34
8.3.1 Digital Audio .....	34
8.3.2 Analog Audio .....	34
8.4 Cable Specifications .....	35
8.5 HDBaseT Features.....	36
<b>9. Acronyms</b> .....	<b>37</b>





## 1. INTRODUCTION

This 1×4+1 4K UHD HDMI Splitter provides an advanced solution for splitting and distributing a single HDMI input (up to 4K@60Hz w/ HDMI 2.0 & HDCP 2.2) to 4 HDBaseT outputs as well as to a single HDMI output with analog stereo audio breakout. The UHD source may be distributed to any of four HDBaseT Receivers via a single Cat.5e/6/7 cable (up to 70m at 1080p or up to 40m at 4K). Despite HDBaseT's 10.Gbps bandwidth limitation, 4K UHD HDMI video sources, up to and including 4K@60Hz (4:4:4, 8-bit) as well as 10/12-bit sources with HDR, are able to be processed and extended by the use of AVLC (Adaptive Visually Lossless Compression) when connected to compatible AVLC Receivers. If the connected HDBaseT Receiver can't support AVLC, 4K@60Hz RGB/YUV 4:4:4 signals will be converted to YUV 4:2:0 or downscaled to 1080p based on the detected EDID on each output.

This unit provides solid audio support, including bypassing 8 channel LPCM digital audio as well as advanced Bitstream and HD Bitstream audio formats via HDBaseT and HDMI. Additionally, an analog stereo audio breakout output is available to provide audio to local powered speakers (LPCM 2.0 sources only).

Standard EDID management functionality is included and the PoH (Power over HDBaseT) feature can provide power to compatible receivers, providing greater flexibility in installations. Control is via front panel controls with an OSD and RS-232.

## 2. APPLICATIONS

- Household entertainment sharing
- Lecture hall & classroom displays
- Showroom displays
- Meeting room presentations

## 3. PACKAGE CONTENTS

- 1× HDMI to HDBaseT/HDMI Splitter
- 1× 24V/3.75A DC Power Adapter
- 1× 3.5mm to IR Blaster Cable
- 1× Shockproof Feet (Set of 4)
- 1× Operation Manual

## 4. SYSTEM REQUIREMENTS

- HDMI source equipment such as a media player, video game console or set-top box.
- Compatible HDBaseT receivers with AVLC and PoH support is recommended.
- HDMI receiving equipment such as an HDTV, monitor or audio amplifier.
- The use of Premium High Speed HDMI cables, and industry standard Cat.6, Cat.6a or Cat.7, is highly recommended.

## 5. FEATURES

- HDMI 2.0 and HDBaseT 1.0 compatible
- HDCP 1.x and HDCP 2.2 compliant
- 1×HDMI input
- 4×HDBaseT and 1×HDMI outputs
- Supports up to 4K UHD (18Gbps, 4K@50/60Hz 4:4:4, 8-bit) video input and output

*Note: Support of resolutions requiring bandwidth above 10.2Gbps via HDBaseT requires a compatible AVLC receiver.*

- Supports Deep Color input and output up to 12-bit
- Supports 10-bit and 12-bit HDR (High Dynamic Range) input/output
- HDBaseT output transmits video, audio and data over a single Cat.5e/6/7 cable and can reach distances up to 40m/131ft at 4K when using Cat.6a/7
- HDBaseT feature support: HD Video and Audio, PoH (PSE) and Control (bi-directional RS-232 and IR pass-through)
- Integrated AVLC (Adaptive Visually Lossless Compression) activates when the bandwidth requirements of the source are beyond 10.2Gbps allowing for support of sources up to 18Gbps with no loss of visual quality
- Supports automatic 4K@60Hz RGB/YUV 4:4:4 to YUV 4:2:0 conversion or downscaling to 1080p for compatibility with non-AVLC HDBaseT receivers based on the detected EDID on each output
- Supports pass-through of all standard digital audio formats: 8



channel LPCM, Bitstream, and HD Bitstream

- High-quality DAC (Digital to Analog audio Conversion) with local analog stereo audio breakout (LPCM 2.0 sources only)
- Comprehensive EDID management options
- Supports standard PoH from the unit to connected HDBaseT receivers (compatible receivers only)


*Note: The PoH function is designed for powering compatible Receiver units only. Non-PoH Receivers will need their own power supply. Receivers from other brands may not be compatible.*

- 1U rack mounted design
- Control via front panel controls with an OSD and RS-232




## 6. OPERATION CONTROLS AND FUNCTIONS

### 6.1 Front Panel

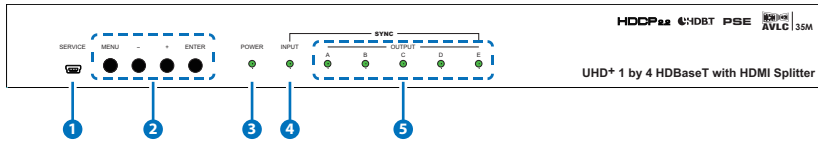

- 1 **SERVICE Port:** This port is reserved for firmware update use only.
- 2 **CONTROL BUTTON BLOCK**
  - MENU Button:** Press to enter the OSD menu, or to back out from menu items.
  - (MINUS) Button:** Press to move down or adjust selections within OSD menus.
  - + (PLUS) Button:** Press to move up or adjust selections within OSD menus.
  - ENTER Button:** Press to confirm a selection within the OSD or to go deeper into a menu item.
- 3 **POWER LED:** This LED will illuminate to indicate the unit is on and receiving power.
- 4 **INPUT LED:** This LED will illuminate to indicate that a live source has been detected on the input port. When no source is detected the LED will remain off.
- 5 **OUTPUT LEDs:** These LEDs will illuminate to indicate when a valid sink has been detected on the associated output port. When no sink is detected the LED will remain off.

## 6.2 Rear Panel

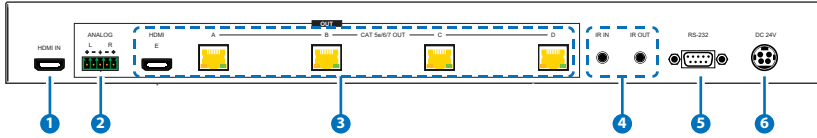

**1 HDMI IN Port:** Connect to HDMI source equipment such as a media player, game console, or set-top box. DVI sources are supported with the use of an HDMI to DVI adapter.

**2 ANALOG R/L Terminal Block:** Connect to powered speakers or an amplifier for analog stereo audio output.

### **3 OUTPUT PORT BLOCK**

**HDMI OUT E Port:** Connect to an HDMI TV, monitor, or amplifier for digital video and audio output.

**CAT 5e/6/7 OUT A~D Ports:** Connect to compatible HDBaseT receivers with single Cat.5e/6/7 cables for transmission of all data signals. PoH will also be supplied to connected compatible PD Receivers.

**4 IR IN Port:** Connect to an IR Extender to receive local IR control signals and extend them to devices connected to the other end of all HDBaseT connections. Ensure that the remote being used is within direct line-of-sight of the IR Extender.

**IR OUT Port:** Connect to the provided IR Blaster to transmit IR signals from the other end of the HDBaseT connection to devices within direct line-of-sight of the IR Blaster.

*Note: To help avoid potential simultaneous IR signal conflicts, IR support for each HDBaseT port and the local ports can be configured individually.*


**5 RS-232 Port:** Connect to a PC, laptop, or serial controllable device for the extension of RS-232 signals between this unit and the connected HDBaseT receivers or to send RS-232 commands to control the unit.

*Note: Switching between local control and RS-232 extension is configured within the OSD menu.*


**6 DC 24V Port:** Plug the 24V DC power adapter into this port and connect it to an AC wall outlet for power.

### 6.3 IR Cable Pinouts

IR Blaster Cable

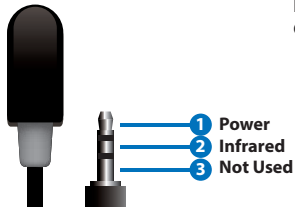


IR Extender Cable

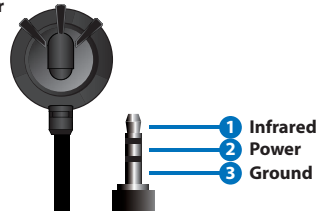

### 6.4 RS-232 Pinout and Defaults

Serial Port Default Settings	
Baud Rate	19200
Data Bits	8
Parity Bits	None
Stop Bits	1
Flow Control	None

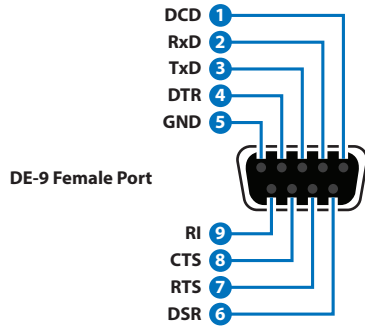



## 6.5 OSD Menu

All functions of this unit can be controlled by using the OSD (On Screen Display) which is activated by pressing the MENU button on the front of the unit. Use the + (PLUS), - (MINUS), and ENTER buttons to navigate the OSD menu. Press the MENU button to back out from any menu item and then press it again to close the menu.

MAIN MENU
<b>Input Information</b>
<b>Output 4K Converter</b>
<b>Output Information</b>
<b>L/R Audio Control</b>
<b>EDID Control</b>
<b>HDCP Control</b>
<b>RS232 Control</b>
<b>IR Control</b>
<b>Remote Control</b>
<b>OSD Setting</b>
<b>System Setting</b>

The individual functions of the OSD will be introduced in the following section. Items marked in **BOLD** are the factory default settings.

INPUT INFORMATION	
2ND LEVEL	3RD LEVEL
Input	[Current video source details]
Name	
Fmt	
Reso	
Freq	
Depth	
Color	
HDCP	
Audio	
HDR	

- 1) **Input information:** Shows details about the current HDMI input signal including detected resolution, pixel clock frequency, color bit depth, color format, HDCP status, audio format and HDR status.

OUTPUT 4K CONVERTER	
2ND LEVEL	3RD LEVEL
All	<b>AUTO</b>
	Bypass
	To YUV420
	To 1080p
OUT A~E	<b>AUTO</b>
	Bypass
	To YUV420
	To 1080p

- 1) **All:** Assigns the selected 4K conversion mode to all outputs.  
*Note: If any individual output has been configured differently, this will display "Different" as the current status.*
- **Auto:** Selecting this allows the unit to automatically select a 4K

conversion method based on each output's EDID.

- **Bypass:** Selecting this will allow the source to go to all outputs without conversion.
- **To YUV420:** Selecting this will automatically convert the color space of a 4K@50/60Hz source from 4:4:4 to 4:2:0.
- **To 1080p:** Selecting this will automatically scale a 4K source to 1080p while keeping the original refresh rate and bit depth.

**2) OUT A~E:** Assigns the selected 4K conversion mode to each individual output.

*Note: This setting will override the "All" setting.*

- **Auto:** Selecting this allows the unit to automatically select a 4K conversion method based on each output's EDID.
- **Bypass:** Selecting this will allow the source to go to all outputs without conversion.
- **To YUV420:** Selecting this will automatically convert the color space of a 4K@50/60Hz source from 4:4:4 to 4:2:0.
- **To 1080p:** Selecting this will automatically scale a 4K source to 1080p while keeping the original refresh rate and bit depth.

OUTPUT INFORMATION	
2ND LEVEL	3RD LEVEL
OUT A~E	[Current status of each output]

**1) Output Information:** Show the connection status, resolution and framerate for each output. If no display is connected it will display "Not Connected", if no HDBaseT receiver is connected it will display "Not Linked".

L/R AUDIO CONTROL	
2ND LEVEL	3RD LEVEL
Mute	On
	<b>OFF</b>
Volume	0~80 <b>[80]</b>
L Enhance	0~40 <b>[0]</b>
R Enhance	0~40 <b>[0]</b>

L/R AUDIO CONTROL	
2ND LEVEL	3RD LEVEL
Format	[Current audio source details]
L/R Clock	
Word Length	
Channel Num	

- 1) **Mute:** Mute or un-mute the analog audio output.
- 2) **Volume:** Set the output volume for the analog audio output in 0.5 dB steps.
- 3) **L/R Enhance:** Independently increase the output volume of the left or right channel of the analog audio output in 0.5 dB steps.
- 4) **Audio Details Block:** Shows detailed information about the current audio signal.

*Note: Some information is not available with bitstream sources.*

EDID CONTROL	
2ND LEVEL	3RD LEVEL
Mode	<b>INT FHD 2CH</b>
	Int FHD MCh
	Int UHD 2Ch
	Int UHD MCh
	Int UHD+ 2Ch
	Int UHD+ MCh
	Int HDR 2Ch
	Int HDR MCh
	User
	Copy Out A~E

EDID CONTROL	
2ND LEVEL	3RD LEVEL
Vndr	[Current EDID selection details]
Name	
Reso	
Freq	
Depth	
YCbCr	
HDR	

- 1) **Mode:** Select the EDID to send to the HDMI input. This unit provides the following 8 internal EDIDs:

<b>FHD 2Ch</b>	1920×1080p@60Hz (170MHz), 8-bit color, LPCM 2.0
<b>FHD MCh</b>	1920×1080p@60Hz (170MHz), 8-bit color, LPCM 7.1 & Bitstream
<b>UHD 2Ch</b>	3840×2160p@30Hz (300MHz), 12-bit Deep Color, LPCM 2.0
<b>UHD MCh</b>	3840×2160p@30Hz (300MHz), 12-bit Deep Color, LPCM 7.1 & Bitstream
<b>UHD+ 2Ch</b>	3840×2160p@60Hz (600MHz), 12-bit Deep Color, LPCM 2.0
<b>UHD+ MCh</b>	3840×2160p@60Hz (600MHz), 12-bit Deep Color, LPCM 7.1 & Bitstream
<b>HDR 2Ch</b>	3840×2160p@60Hz (600MHz), 12-bit HDR, LPCM 2.0
<b>HDR MCh</b>	3840×2160p@60Hz (600MHz), 12-bit HDR, LPCM 7.1 & Bitstream

*Note: In some rare cases it is possible for custom or external EDIDs to cause compatibility issues with certain sources. If this happens, it is recommended to switch to one of the 8 internal EDIDs for maximum compatibility.*



2) **EDID Details Block:** Shows detailed information about the contents of the currently selected EDID.

HDCP CONTROL	
2ND LEVEL	3RD LEVEL
Mode	<b>REFER SINK</b>
	Refer Source
	Apple Mode
Out A~E	[Current HDCP status of each output]

1) **Mode:** Set the HDCP behavior of the unit.

- **Refer Sink:** Each output enables HDCP at the highest version supported by each connected display.
- **Refer Source:** The input signal maintains its native HDCP version.
- **Apple Mode:** HDCP support is completely disabled.

2) **HDCP Status Block:** Shows the current HDCP status of each individual output.

RS232 CONTROL	
2ND LEVEL	3RD LEVEL
Mode	<b>COMMAND</b>
	Pass Through
Port A~D	<b>DISABLED</b>
	Baud 2400
	Baud 4800
	Baud 7200
	Baud 9600
	Baud 14400
	Baud 19200
	Baud 38400
	Baud 57600

RS232 CONTROL	
2ND LEVEL	3RD LEVEL
	Baud 115200
Local	Baud 2400
	Baud 4800
	Baud 7200
	Baud 9600
	Baud 14400
	<b>BAUD 19200</b>
	Baud 38400
	Baud 57600
	Baud 115200

- 1) **Mode:** Set the operational mode of the RS-232 port on the unit. Selecting "Command" allows direct control of the unit via RS-232. Selecting "Pass Through" allows extension of RS-232 signals to all connected HDBaseT receivers.
- 2) **Port A~D:** Set the supported baud rate for RS-232 extension over each HDBaseT port. Selecting "Disabled" will block RS-232 from being extended over that port.

*Note: Baud rate conversion will be performed automatically if the local baud rate and destination port baud rate are different.*

- 3) **Local:** Set the baud rate to use on the local RS-232 port.

IR CONTROL	
2ND LEVEL	3RD LEVEL
Ch A~D	<b>ENABLE BIDIRECT</b>
	Disabled
	Enable Emitter
	Enable Receiver
Local	<b>ENABLE BIDIRECT</b>
	Disabled
	Enable Emitter

IR CONTROL	
2ND LEVEL	3RD LEVEL
	Enable Receiver

- 1) **Ch A~D:** Configure the IR extension behavior of each HDBaseT port.
  - **Enable Bidirect:** Enables support for bi-directional extension of IR signals over the specified HDBaseT port.
  - **Disabled:** Disables all IR extension over the specified HDBaseT port.
  - **Enable Emitter:** Enables transmission of IR signals to the receiver connected to the specified HDBaseT port, but disables receiving IR signals from it.
  - **Enable Receiver:** Enables reception of IR signals from the receiver connected to the specified HDBaseT port, but disables transmitting IR signals to it.
  
- 2) **Local:** Configure the IR extension behavior of the local IR ports.
  - **Enable Bidirect:** Enables both IR ports on the unit.
  - **Disabled:** Disables both IR ports on the unit.
  - **Enable Emitter:** Enables the IR OUT port on the unit and disables the IR IN port.
  - **Enable Receiver:** Enables the IR IN port on the unit and disables the IR OUT port.

REMOTE CONTROL	
2ND LEVEL	3RD LEVEL
Link With	Off
	Out A
	Out B
	Out C
	Out D
	<b>OUT E</b>
[RED] Button:	Menu
[GREEN] Button:	Minus (-)

REMOTE CONTROL	
2ND LEVEL	3RD LEVEL
[YELLOW] Button:	Plus (+)
[BLUE] Button:	Enter

- 1) **Link With:** Select the display to accept CEC remote control commands from to control the unit or disable the functionality. The selected display's remote control can be used to navigate this unit's OSD menu using the remote's red, green, yellow and blue buttons.

*Note: Requires a compatible remote control and display. The selected display must have CEC device control activated.*

- 2) **[COLOR] Buttons:** Lists the unit's remote control functionality that is mapped to each colored button.

*Note: Not all displays support all CEC command types, please check the display's documentation to see if it supports remote CEC device control via the colored remote buttons.*

OSD SETTING	
2ND LEVEL	3RD LEVEL
Timeout	Never
	1 ~ 60 <b>[30]</b>
Horizontal	0 ~ 100 <b>[2]</b>
Vertical	0 ~ 100 <b>[3]</b>
Transparency	0 ~ 7 <b>[3]</b>
Contrast	0 ~ 1 <b>[0]</b>
Panel Color	Red
	Green
	Blue
	<b>GREY</b>
Font Color	Black
	White
	Red

OSD SETTING	
2ND LEVEL	3RD LEVEL
	Green
	<b>BLUE</b>
	Yellow
	Cyan
	Magenta
Free Run	No
	Red
	Green
	<b>BLUE</b>
	Black
	Color
Default	Yes
	<b>NO</b>

- 1) **Timeout:** Set the display timeout for the OSD Menu in seconds. Selecting "Never" will disable the timeout.
- 2) **Horizontal:** Set the horizontal position of the OSD Menu.
- 3) **Vertical:** Set the vertical position of the OSD Menu.
- 4) **Transparency:** Set the transparency level of the box behind the OSD menu.
- 5) **Contrast:** Switch between contrast modes for the OSD menu.  
*Note: Selecting the lower contrast option "1" may improve visibility when overlaid on HDR sources.*
- 6) **Panel Color:** Set the color of the box behind the OSD menu.
- 7) **Font Color:** Set the color of the OSD menu's text.
- 8) **Free Run:** Set the Free Run color to display when no source is detected. Selecting "Color" will show a color bar pattern. Selecting "No" will disable the Free Run function.
- 9) **Default:** Reset the OSD settings to their factory default values.

SYSTEM SETTING	
2ND LEVEL	3RD LEVEL
VID	[System details]
PID	
SN	
FW Ver	
Factory Reset?	<b>NO</b>
	Yes

- 1) **System Information Block:** Shows the units system ID numbers, serial number and current firmware version.
- 2) **Factory Reset:** Selecting YES will reset the unit's settings back to their factory defaults.

*Note: The unit will automatically reboot after the factory reset is complete.*

## 6.6 RS-232 Commands

COMMAND	
Description and Parameters	
<b>System Commands</b>	
<b>help</b>	Show the full command list.
<b>help N1</b>	Show help details about command <b>N1</b> . <b>N1</b> = {Command name}
<b>get model name</b>	Show the unit's model name.
<b>get fw ver</b>	Show the unit's current firmware version.

COMMAND	
Description and Parameters	
<b>set system reboot</b>	
	Reboot the unit.
<b>set description N1</b>	
	Set the description/name of the unit.
<b>N1</b> = {Name}	[64 characters max]
<b>get description</b>	
	Show the unit's current description/name.
<b>set keylock N1</b>	
	Enable or disable the front panel key lock.
	Available values for <b>N1</b> :
ON	[Lock front panel]
OFF	[Unlock front panel]
<b>get keylock</b>	
	Show the current front panel lock state.
<b>set factory default</b>	
	Reset the unit to the factory defaults.

### Input Commands

<b>get in port number</b>	
	Report the number of inputs supported by the unit.
<b>get in type list</b>	
	List the interface type supported by each input.
<b>set in 1 hdcp mode N1</b>	
	Set the input's HDCP mode.
	Available values for <b>N1</b> :
0	[Apple mode]
1	[Refer to source]
2	[Refer to sink]
<b>get in 1 hdcp mode</b>	
	Show the input's current HDCP mode.

COMMAND	
Description and Parameters	
<b>set in 1 edid N1</b>	
Set the EDID to use on the HDMI input.	
Available values for <b>N1</b> :	
1	[Internal FHD 2CH]
2	[Internal FHD Multi-CH]
3	[Internal UHD 2CH]
4	[Internal UHD Multi-CH]
5	[Internal UHD+ 2CH]
6	[Internal UHD+ Multi-CH]
7	[Internal HDR 2CH]
8	[Internal HDR Multi-CH]
9	[User EDID 1]
10	[Copy output A's EDID]
11	[Copy output B's EDID]
12	[Copy output C's EDID]
13	[Copy output D's EDID]
14	[Copy output E's EDID]
<b>get in 1 edid</b>	
Show the EDID currently being used by the input.	
<b>get in 1 edid data</b>	
Show the current contents of the input's EDID as ASCII hex data.	
<b>get in 1 edid information</b>	
Show English readable details from the EDID assigned to the input.	

### Output Commands

<b>get out port number</b>
Show the total number of outputs on the unit.
<b>get out type list</b>
List the port type of all outputs on the unit.



COMMAND	
Description and Parameters	
<b>set out N1 convert N2</b>	
Set the 4K source conversion mode to use on the specified output.	
Available values for <b>N1</b> :	
A	[Output A]
B	[Output B]
C	[Output C]
D	[Output D]
E	[Output E]
Available values for <b>N2</b> :	
0	[Bypass, no conversion]
1	[Convert color space to YUV 4:2:0]
2	[Convert resolution to 1080p]
3	[Automatic, based on sink's EDID]
<b>get out N1 convert</b>	
Show the current conversion mode used by the specified output.	
Available values for <b>N1</b> :	
A	[Output A]
B	[Output B]
C	[Output C]
D	[Output D]
E	[Output E]
<b>get out N1 edid data</b>	
Show the current contents of the specified output's EDID as ASCII hex data.	
Available values for <b>N1</b> :	
A	[Output A]
B	[Output B]
C	[Output C]
D	[Output D]
E	[Output E]

COMMAND	
Description and Parameters	
<b>get out N1 edid information</b>	
Show English readable details from the EDID provided by the specified output.	
Available values for <b>N1</b> :	
A	[Output A]
B	[Output B]
C	[Output C]
D	[Output D]
E	[Output E]

#### User EDID Commands

<b>get user edid number</b>	
Show the number of User EDIDs supported by the unit.	
<b>set user 1 edid data N1</b>	
Upload a new EDID (in ASCII hex format) for use as the User EDID.	
<b>N1</b> = {Comma delimited hex pairs} [EDID data]	
<b>get user 1 edid data</b>	
Show the EDID used by the User EDID as ASCII hex data.	
<b>get user 1 edid information</b>	
Show English readable details from the User EDID.	

#### Analog Audio Commands

<b>set analog audio mute N1</b>	
Enable or disable muting the analog audio output.	
Available values for <b>N1</b> :	
ON	[Mute the analog audio output]
OFF	[Un-mute the analog audio output]
<b>get analog audio mute</b>	
Show the current mute state of the analog audio output.	

COMMAND	
Description and Parameters	
<b>set analog audio volume N1</b>	
Set the volume level of the analog audio output.	
<b>N1</b> = 0~80	[Volume adjustment in 0.5 dB steps]
<b>get analog audio volume</b>	
Show the current volume level of the analog audio output.	
<b>set analog audio left enhance N1</b>	
Set the left channel volume enhancement for the analog audio output.	
<b>N1</b> = 0~40	[Volume adjustment in 0.5 dB steps]
<b>get analog audio left enhance</b>	
Show the current left channel volume enhancement for the analog audio output.	
<b>set analog audio right enhance N1</b>	
Set the right channel volume enhancement for the analog audio output.	
<b>N1</b> = 0~40	[Volume adjustment in 0.5 dB steps]
<b>get analog audio right enhance</b>	
Show the current right channel volume enhancement for the analog audio output.	

## COMMAND

### Description and Parameters

#### Serial Commands

##### set uart N1 N2

Enable or disable the RS-232 pass-through function for the specified HDBaseT output or the local port.

Available values for **N1**:

A	[Output A]
B	[Output B]
C	[Output C]
D	[Output D]
E	[Local RS-232]

Available values for **N2**:

ON	[Enable RS-232 pass-through]
OFF	[Disable RS-232 pass-through]

##### get uart N1

Show the current RS-232 pass-through setting for the specified port.

Available values for **N1**:

A	[Output A]
B	[Output B]
C	[Output C]
D	[Output D]
E	[Local RS-232]

##### set uart N1 baud rate N2

Set the baud rate of the specified RS-232 port.

Available values for **N1**:

A	[Output A]
B	[Output B]
C	[Output C]
D	[Output D]
E	[Local RS-232]

COMMAND	
Description and Parameters	
Available values for <b>N2</b> :	
2400	[2400 baud]
4800	[4800 baud]
7200	[7200 baud]
9600	[9600 baud]
14400	[14400 baud]
19200	[19200 baud]
38400	[38400 baud]
57600	[57600 baud]
115200	[115200 baud]
<b>get uart N1 baud rate</b>	
Show the current baud rate of the specified RS-232 port.	
Available values for <b>N1</b> :	
A	[Output A]
B	[Output B]
C	[Output C]
D	[Output D]
E	[Local RS-232]
<b>set uart N1 data length N2</b>	
Set the data bits for the specified RS-232 port.	
Available values for <b>N1</b> :	
A	[Output A]
B	[Output B]
C	[Output C]
D	[Output D]
E	[Local RS-232]
<b>N2 = 5~8</b>	[Number of data bits]
<b>get uart N1 data length</b>	
Show the current number of data bits of the specified RS-232 port.	
Available values for <b>N1</b> :	
A	[Output A]
B	[Output B]
C	[Output C]
D	[Output D]
E	[Local RS-232]

COMMAND	
Description and Parameters	
<b>set uart N1 parity N2</b>	
Set the parity of the specified RS-232 port.	
Available values for <b>N1</b> :	
A	[Output A]
B	[Output B]
C	[Output C]
D	[Output D]
E	[Local RS-232]
Available values for <b>N2</b> :	
0	[No parity]
1	[Odd parity]
2	[Even parity]
<b>get uart N1 parity</b>	
Show the current parity setting of the specified RS-232 port.	
Available values for <b>N1</b> :	
A	[Output A]
B	[Output B]
C	[Output C]
D	[Output D]
E	[Local RS-232]

### IR Commands

<b>set ir N1 emitter N2</b>	
Enable or disable the IR output on the specified HDBaseT port's receiver, or on the local unit.	
Available values for <b>N1</b> :	
A	[Output A's receiver's IR output]
B	[Output B's receiver's IR output]
C	[Output C's receiver's IR output]
D	[Output D's receiver's IR output]
E	[Local IR output]
Available values for <b>N2</b> :	
ON	[Enable IR output]
OFF	[Disable IR output]

COMMAND															
Description and Parameters															
<b>get ir N1 emitter</b>															
<p>Show the current enabled state of the IR output on the specified HDBaseT port's receiver, or on the local unit.</p> <p>Available values for <b>N1</b>:</p> <table> <tr> <td>A</td> <td>[Output A's receiver's IR output]</td> </tr> <tr> <td>B</td> <td>[Output B's receiver's IR output]</td> </tr> <tr> <td>C</td> <td>[Output C's receiver's IR output]</td> </tr> <tr> <td>D</td> <td>[Output D's receiver's IR output]</td> </tr> <tr> <td>E</td> <td>[Local IR output]</td> </tr> </table>		A	[Output A's receiver's IR output]	B	[Output B's receiver's IR output]	C	[Output C's receiver's IR output]	D	[Output D's receiver's IR output]	E	[Local IR output]				
A	[Output A's receiver's IR output]														
B	[Output B's receiver's IR output]														
C	[Output C's receiver's IR output]														
D	[Output D's receiver's IR output]														
E	[Local IR output]														
<b>set ir N1 receiver N2</b>															
<p>Enable or disable the IR input on the specified HDBaseT port's receiver, or on the local unit.</p> <p>Available values for <b>N1</b>:</p> <table> <tr> <td>A</td> <td>[Output A's receiver's IR input]</td> </tr> <tr> <td>B</td> <td>[Output B's receiver's IR input]</td> </tr> <tr> <td>C</td> <td>[Output C's receiver's IR input]</td> </tr> <tr> <td>D</td> <td>[Output D's receiver's IR input]</td> </tr> <tr> <td>E</td> <td>[Local IR input]</td> </tr> </table> <p>Available values for <b>N2</b>:</p> <table> <tr> <td>ON</td> <td>[Enable IR input]</td> </tr> <tr> <td>OFF</td> <td>[Disable IR input]</td> </tr> </table>		A	[Output A's receiver's IR input]	B	[Output B's receiver's IR input]	C	[Output C's receiver's IR input]	D	[Output D's receiver's IR input]	E	[Local IR input]	ON	[Enable IR input]	OFF	[Disable IR input]
A	[Output A's receiver's IR input]														
B	[Output B's receiver's IR input]														
C	[Output C's receiver's IR input]														
D	[Output D's receiver's IR input]														
E	[Local IR input]														
ON	[Enable IR input]														
OFF	[Disable IR input]														
<b>get ir N1 receiver</b>															
<p>Show the current enabled state of the IR input on the specified HDBaseT port's receiver, or on the local unit.</p> <p>Available values for <b>N1</b>:</p> <table> <tr> <td>A</td> <td>[Output A's receiver's IR input]</td> </tr> <tr> <td>B</td> <td>[Output B's receiver's IR input]</td> </tr> <tr> <td>C</td> <td>[Output C's receiver's IR input]</td> </tr> <tr> <td>D</td> <td>[Output D's receiver's IR input]</td> </tr> <tr> <td>E</td> <td>[Local IR input]</td> </tr> </table>		A	[Output A's receiver's IR input]	B	[Output B's receiver's IR input]	C	[Output C's receiver's IR input]	D	[Output D's receiver's IR input]	E	[Local IR input]				
A	[Output A's receiver's IR input]														
B	[Output B's receiver's IR input]														
C	[Output C's receiver's IR input]														
D	[Output D's receiver's IR input]														
E	[Local IR input]														

## COMMAND

### Description and Parameters

#### OSD Commands

<b>set osd timeout N1</b>	
Set the OSD's timeout value (in seconds) or disable the timeout.	
Available values for <b>N1</b> :	
0	[No timeout]
1~60	[Timeout in seconds]
<b>get osd timeout</b>	
Show the current OSD timeout value.	
<b>set osd horizontal N1</b>	
Set the horizontal position of the OSD.	
<b>N1</b> = 0~100	[Horizontal position]
<b>get osd horizontal</b>	
Show the current horizontal position of the OSD.	
<b>set osd vertical N1</b>	
Set the vertical position of the OSD.	
<b>N1</b> = 0~100	[Vertical position]
<b>get osd vertical</b>	
Show the current vertical position of the OSD.	
<b>set osd transparency N1</b>	
Set the transparency level of the OSD.	
Available values for <b>N1</b> :	
0	[Fully opaque]
1	[Level 1]
2	[Level 2]
3	[Level 3]
4	[Level 4]
5	[Level 5]
6	[Level 6]
7	[Fully Transparent]




COMMAND	
Description and Parameters	
<b>get osd transparency</b>	
Show the current transparency level of the OSD.	
<b>set osd contrast N1</b>	
Set the contrast mode of the OSD.	
Available values for <b>N1</b> :	
0	[Normal]
1	[Low contrast]
<b>get osd contrast</b>	
Show the current contrast mode of the OSD.	
<b>set osd panel color N1</b>	
Set the color of the background of the OSD.	
Available values for <b>N1</b> :	
1	[Red]
2	[Green]
3	[Blue]
4	[Gray]
<b>get osd panel color</b>	
Show the current color of the background of the OSD.	
<b>set osd font color N1</b>	
Set the color of the font used by the OSD.	
Available values for <b>N1</b> :	
1	[Black]
2	[White]
3	[Red]
4	[Green]
5	[Blue]
6	[Yellow]
7	[Cyan]
8	[Magenta]
<b>get osd font color</b>	
Show the current color of the font used by the OSD.	

COMMAND	
Description and Parameters	
<b>set osd freerun color N1</b>	
Set the free run mode and the color/pattern used when the input signal is lost and free run is active.	
Available values for <b>N1</b> :	
0	[Free run is disabled]
1	[Red screen]
2	[Green screen]
3	[Blue screen]
4	[Black screen]
5	[Color bars]
<b>get osd freerun color</b>	
Show the current free run color setting.	
<b>set osd default</b>	
Reset the OSD configuration to the factory defaults.	

*Note: Commands will not be executed unless followed by a carriage return. Commands are not case-sensitive.*

## 7. CONNECTION DIAGRAM

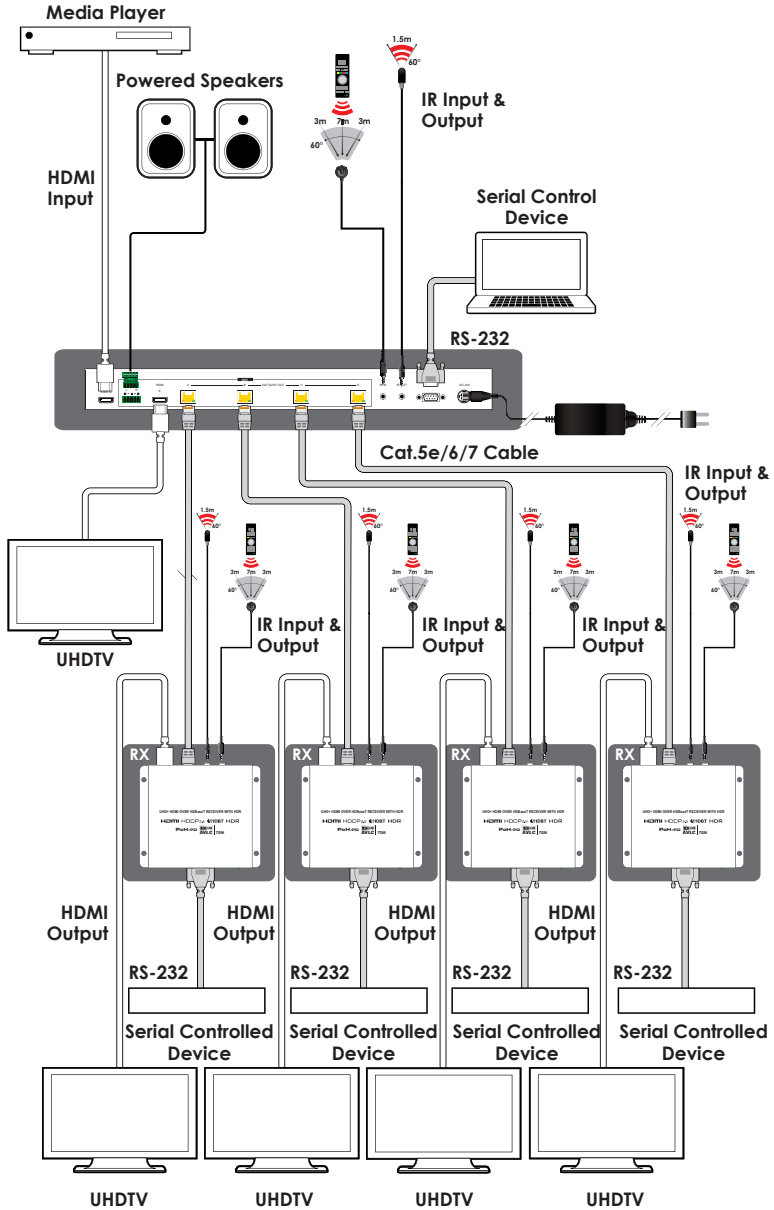



## 8. SPECIFICATIONS

### 8.1 Technical Specifications

<b>HDMI Bandwidth</b>	18Gbps
<b>HDBaseT Bandwidth</b>	10.2Gbps
<b>Input Ports</b>	1×HDMI (Type-A)
<b>Output Ports</b>	4×HDBaseT (RJ-45) 1×HDMI (Type-A) 1×Stereo Audio (5-pin Terminal Block)
<b>Pass-through Ports</b>	1×IR Extender (3.5mm) 1×IR Blaster (3.5mm)
<b>Control Ports</b>	1×RS-232 (DE-9)
<b>Service Port</b>	1×USB 2.0 (Mini B)
<b>IR Frequency</b>	30 – 50kHz (30 – 60kHz under ideal conditions)
<b>Baud Rate</b>	19200
<b>Power Supply</b>	24V/3.75A DC (US/EU standards, CE/FCC/UL certified)
<b>ESD Protection (HBM)</b>	±8kV (Air Discharge) ±4kV (Contact Discharge)
<b>Dimensions (W×H×D)</b>	432mm×44mm×174mm [Case Only] 432mm×44mm×180mm [All Inclusive]
<b>Weight</b>	906g
<b>Chassis Material</b>	Metal (Steel)
<b>Chassis Color</b>	Black
<b>Operating Temperature</b>	0°C – 40°C/32°F – 104°F
<b>Storage Temperature</b>	-20°C – 60°C/-4°F – 140°F
<b>Relative Humidity</b>	20 – 90% RH (Non-condensing)
<b>Power Consumption</b>	20.8W

## 8.2 Video Specifications

Supported Resolutions (Hz)	Input	Output	
	HDMI	HDMI	HDBaseT
720×400p@70/85	✓	✓	✓
640×480p@60/72/75/85	✓	✓	✓
720×480i@60	✓	✓	✓
720×480p@60	✓	✓	✓
720×576i@50	✓	✓	✓
720×576p@50	✓	✓	✓
800×600p@56/60/72/75/85	✓	✓	✓
848×480p@60	✓	✓	✓
1024×768p@60/70/75/85	✓	✓	✓
1152×864p@75	✓	✓	✓
1280×720p@50/60	✓	✓	✓
1280×768p@60/75/85	✓	✓	✓
1280×800p@60/75/85	✓	✓	✓
1280×960p@60/85	✓	✓	✓
1280×1024p@60/75/85	✓	✓	✓
1360×768p@60	✓	✓	✓
1366×768p@60	✓	✓	✓
1400×1050p@60	✓	✓	✓
1440×900p@60/75	✓	✓	✓
1600×900p@60RB	✓	✓	✓
1600×1200p@60	✓	✓	✓
1680×1050p@60	✓	✓	✓
1920×1080i@50/60	✓	✓	✓
1920×1080p@24/25/30	✓	✓	✓
1920×1080p@50/60	✓	✓	✓

Supported Resolutions (Hz)	Input	Output	
	HDMI	HDMI	HDBaseT
1920×1200p@60RB	✓	✓	✓
2560×1440p@60RB	✓	✓	x
2560×1600p@60RB	✓	✓	x
2048×1080p@24/25/30	✓	✓	✓
2048×1080p@50/60	✓	✓	✓
3840×2160p@24/25/30	✓	✓	✓
3840×2160p@50/60 (4:2:0)	✓	✓	✓
3840×2160p@24, HDR10	✓	✓	AVLC
3840×2160p@50/60 (4:2:0), HDR10	✓	✓	AVLC
3840×2160p@50/60	✓	✓	AVLC
4096×2160p@24/25/30	✓	✓	✓
4096×2160p@50/60 (4:2:0)	✓	✓	✓
4096×2160p@24, HDR10	✓	✓	x
4096×2160p@50/60 (4:2:0), HDR10	✓	✓	x
4096×2160p@50/60	✓	✓	x

## 8.3 Audio Specifications

### 8.3.1 Digital Audio

HDMI Input/Output	
LPCM	
<b>Max Channels</b>	8 Channels
<b>Sampling Rate (kHz)</b>	32, 44.1, 48, 88.2, 96, 176.4, 192
Bitstream	
<b>Supported Formats</b>	Standard & High-Definition

### 8.3.2 Analog Audio

Analog Output	
<b>Max Audio Level</b>	4.2Vrms
<b>THD+N</b>	< -80dB@0dBFS 1kHz (A-wt)
<b>SNR</b>	> 70dB@0dBFS
<b>Frequency Response</b>	< ±3dB@20Hz~20kHz
<b>Crosstalk</b>	< -70dB@10kHz
<b>Impedance</b>	499Ω
<b>Type</b>	Balanced

## 8.4 Cable Specifications

Cable Length	1080p		4K30	4K60
	8-bit	12-bit	(4:4:4) 8-bit	(4:4:4) 8-bit
<b>High Speed HDMI Cable</b>				
<b>HDMI Input</b>	15m	10m	5m	3m
<b>HDMI Output</b>	15m	10m	5m	3m
<b>Ethernet Cable</b>				
<b>Cat.5e/6</b>	60m		35m	
<b>Cat.6a/7</b>	70m		40m	

### Bandwidth Category Examples:

- **1080p (FHD Video)**
  - Up to 1080p@60Hz, 12-bit color
  - Data rates lower than 5.3Gbps or below 225MHz TMDS clock
- **4K30 (UHD Video)**
  - 4K@24/25/30Hz & 4K@50/60Hz (4:2:0), 8-bit color
  - 4K@50/60Hz (4:4:4, 8-bit) with AVLC active
  - Data rates higher than 5.3Gbps or above 225MHz TMDS clock but below 10.2Gbps
- **4K60 (UHD+ Video)**
  - 4K@50/60Hz (4:4:4, 8-bit), AVLC required over HDBaseT
  - 4K@50/60Hz (4:2:0, 10-bit HDR), AVLC required over HDBaseT
  - Data rates higher than 10.2Gbps



## 8.5 HDBaseT Features

HDBaseT Feature Set	Transmitter
Video & Audio Extension	Supported
LAN Extension	Unsupported
Send power to Receiver	Supported (PoH)
Accept power from Receiver	Unsupported
IR Extension	Supported
RS-232 Extension	Supported
USB 2.0 Extension	Unsupported

## 9. ACRONYMS

ACRONYM	COMPLETE TERM
<b>ASCII</b>	American Standard Code for Information Interchange
<b>AV</b>	Audio/Video
<b>AVLC</b>	Adaptive Visually Lossless Compression
<b>AVR</b>	Audio/Video Receiver or Recorder
<b>Cat.5e</b>	Enhanced Category 5 cable
<b>Cat.6</b>	Category 6 cable
<b>Cat.6a</b>	Augmented Category 6 cable
<b>Cat.7</b>	Category 7 cable
<b>CEC</b>	Consumer Electronics Control
<b>CLI</b>	Command-Line Interface
<b>DAC</b>	Digital-to-Analog Converter
<b>DVI</b>	Digital Visual Interface
<b>EDID</b>	Extended Display Identification Data
<b>HD</b>	High-Definition
<b>HDBT</b>	HDBaseT
<b>HDCP</b>	High-bandwidth Digital Content Protection
<b>HDMI</b>	High-Definition Multimedia Interface
<b>HDR</b>	High Dynamic Range
<b>HDTV</b>	High-Definition Television
<b>IR</b>	Infrared
<b>LED</b>	Light-Emitting Diode
<b>LPCM</b>	Linear Pulse-Code Modulation
<b>OSD</b>	On-Screen Display
<b>PC</b>	Personal Computer
<b>PD</b>	Powered Device
<b>PoH</b>	Power over HDBaseT
<b>PSE</b>	Power Sourcing Equipment

ACRONYM	COMPLETE TERM
<b>SNR</b>	Signal-to-Noise Ratio
<b>THD+N</b>	Total Harmonic Distortion plus Noise
<b>UHD</b>	Ultra-High-Definition (10.2Gbps)
<b>UHD+</b>	Ultra-High-Definition Plus (18Gbps)
<b>UHDTV</b>	Ultra-High-Definition Television
<b>USB</b>	Universal Serial Bus
<b>VGA</b>	Video Graphics Array
<b>WUXGA (RB)</b>	Widescreen Ultra Extended Graphics Array (Reduced Blanking)
<b>XGA</b>	Extended Graphics Array



**CYPRESS TECHNOLOGY CO., LTD.**

[www.cypress.com.tw](http://www.cypress.com.tw)